


PRESSURE OIL SYSTEM DRAWING 8005

CONNECTION	CONNECTION POINT POSSIBLE TO USE	CONNECTION POINT MUST BE AT THE FOLLOWING LEVEL
ENGINE OIL PRESSURE ①	A, B	ANY LEVEL
VENTILATION ②	A, B, C, D	HIGHEST LEVEL
OIL DRAINAGE ③	A, B, C, D	LOWEST LEVEL

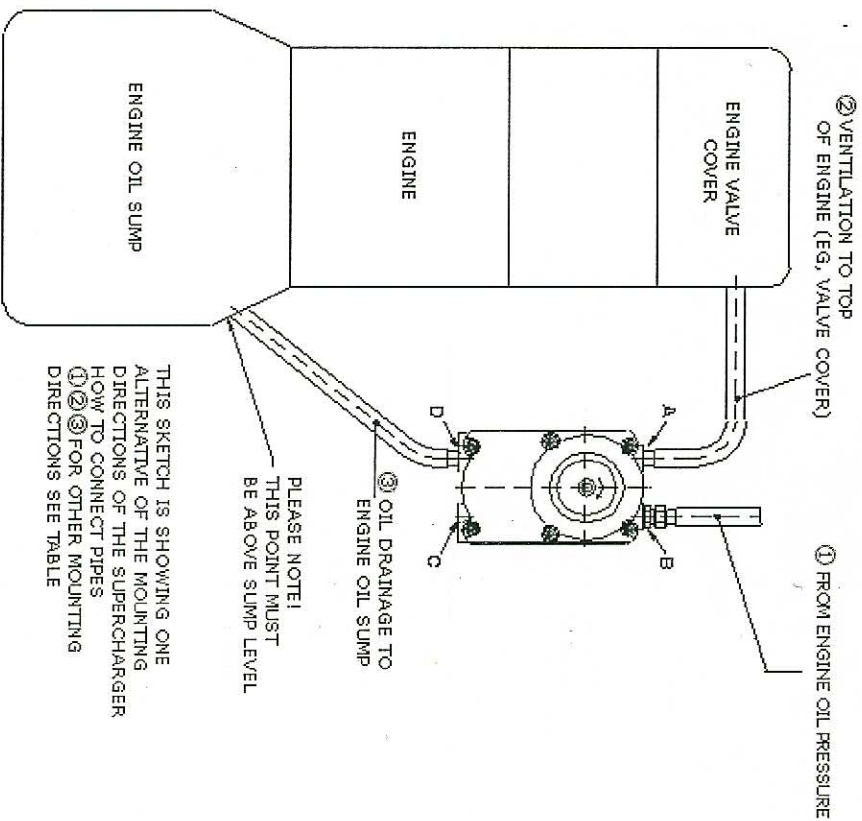

THIS SKETCH IS SHOWING ONE ALTERNATIVE OF THE MOUNTING DIRECTIONS OF THE SUPERCHARGER HOW TO CONNECT PIPES ① ② ③ FOR OTHER MOUNTING DIRECTIONS SEE TABLE